
**USER MANUAL** 

CE



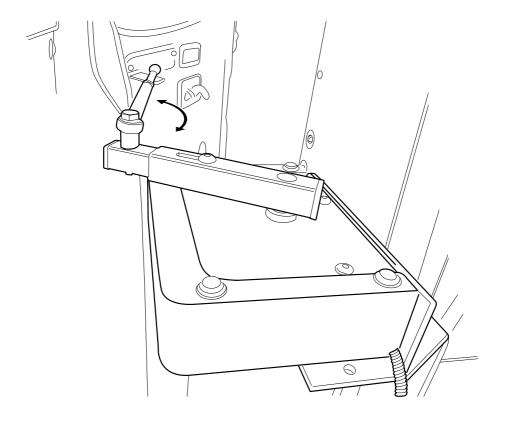

VEHICLE ACCESSIBILITY SOLUTIONS

EN







## Opening

1. Press and hold the button **U** to open the rear doors.




**WARNING:** Keep a safe distance when operating the RDO and lift!

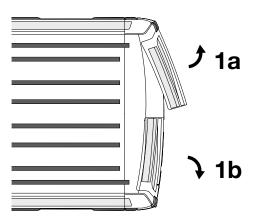


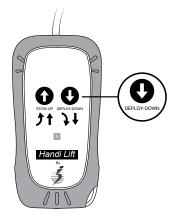


2. Continue pressing the button **U** to activate the wheelchair lift.

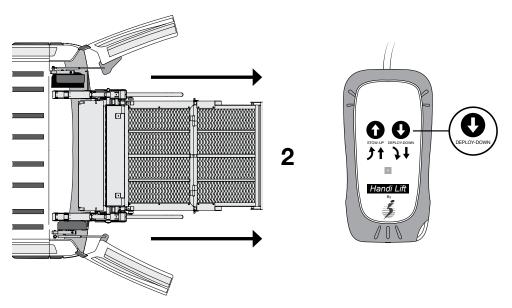

## User guide for wireless control mobilityRD Opening 1. Press the button (1) to activate the RDO. WARNING: Keep a safe distance when operating 2. Press and hold the button **U** to open the rear doors. the RDO and lift! **1**a Handi Lift

 

**1**b

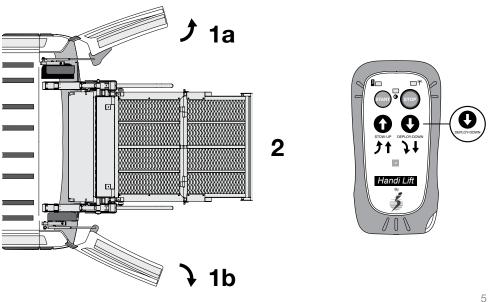

## Notes



1





